



# Luxe-Line


MONTAGEANLEITUNG

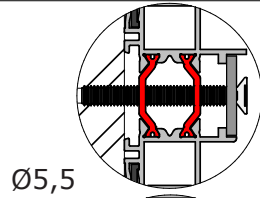


# Handbuch Luxe-Line

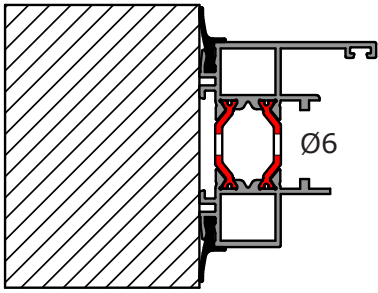




**Stahl**  
M6x40 DIN 7500

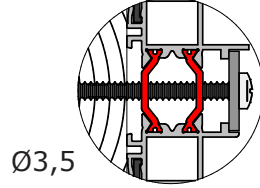


**Holz**  
Parker 5.5x50 DIN 7981B

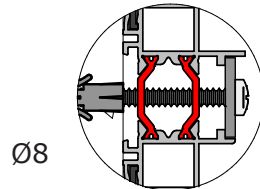


**Beton**  
5.5x50 DIN 7981B  
Plug 8mm

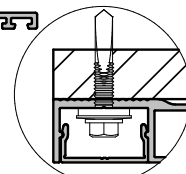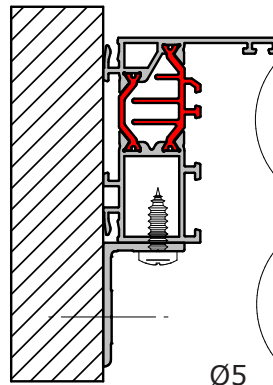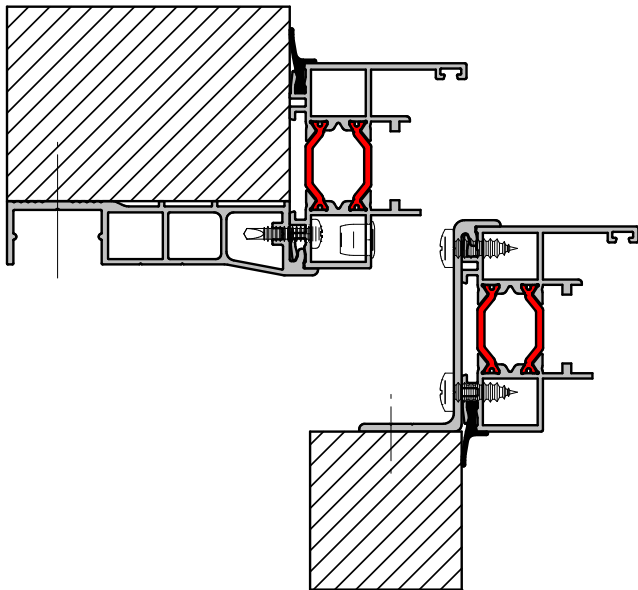



**Fenster**  
**Stahl**  
5.5x32mm 4.6

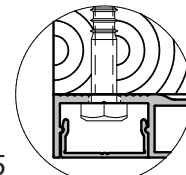


**Holz**  
8x50 DIN 571

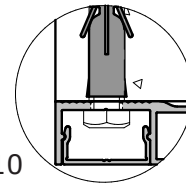


**Beton**  
8x50 DIN 571  
Plug 10mm

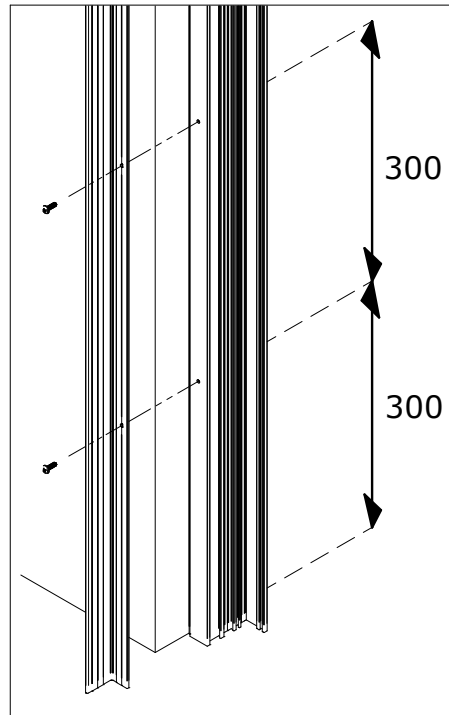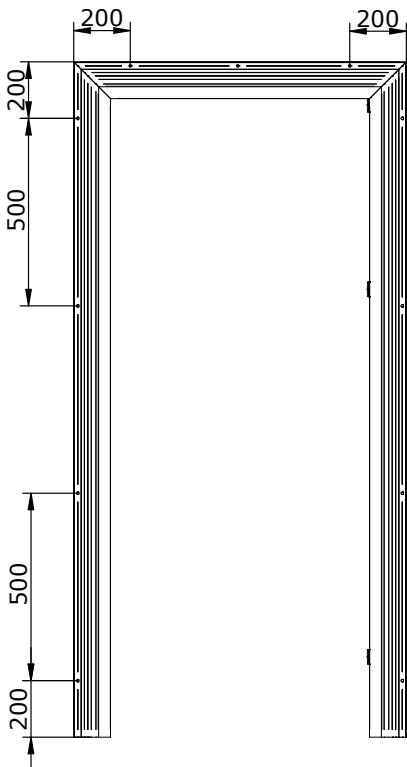


## Fenster

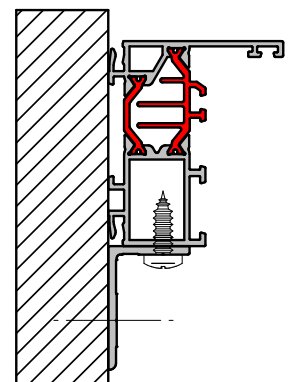


1

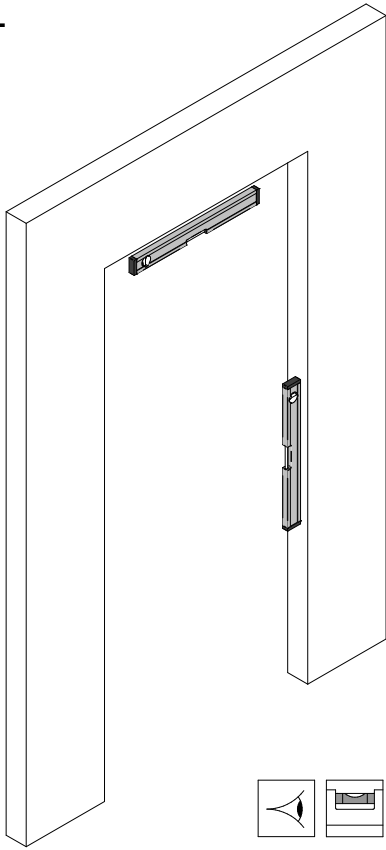



2

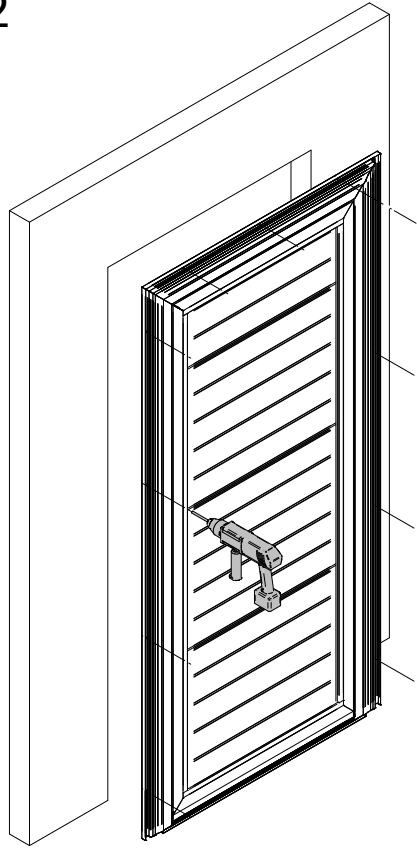


3

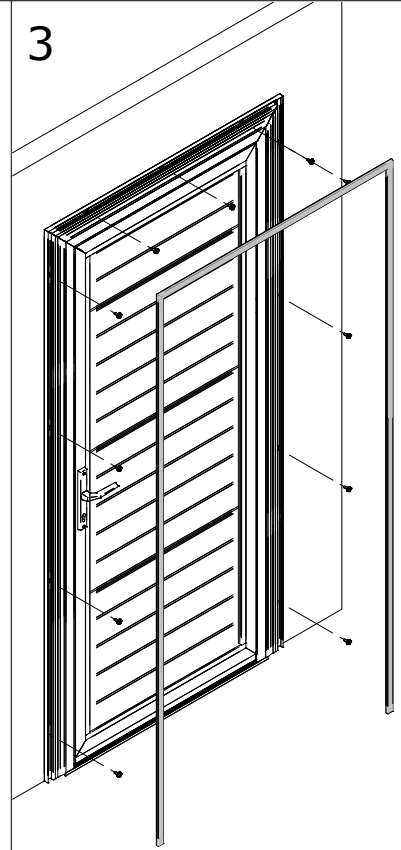


4

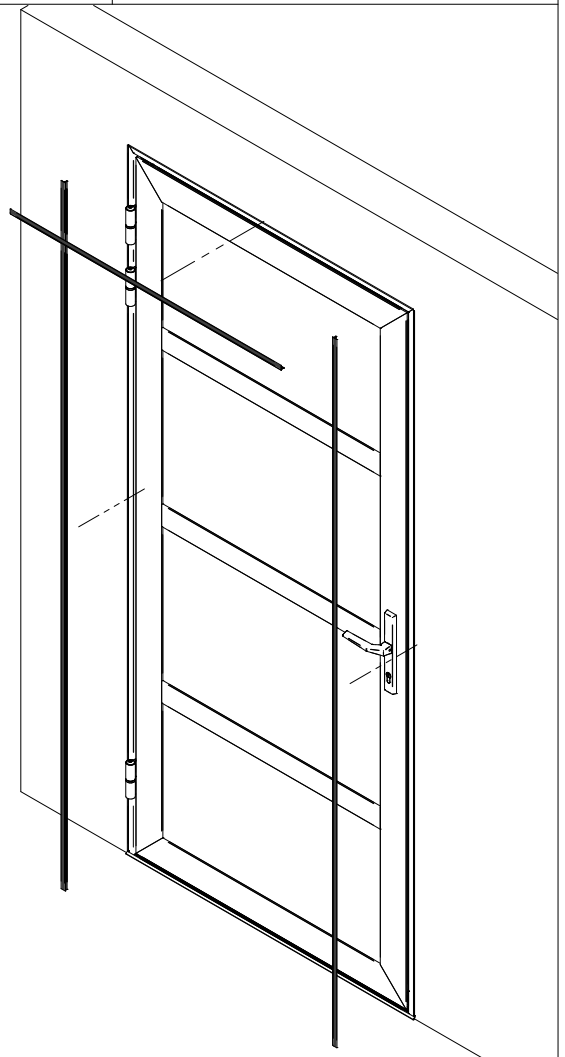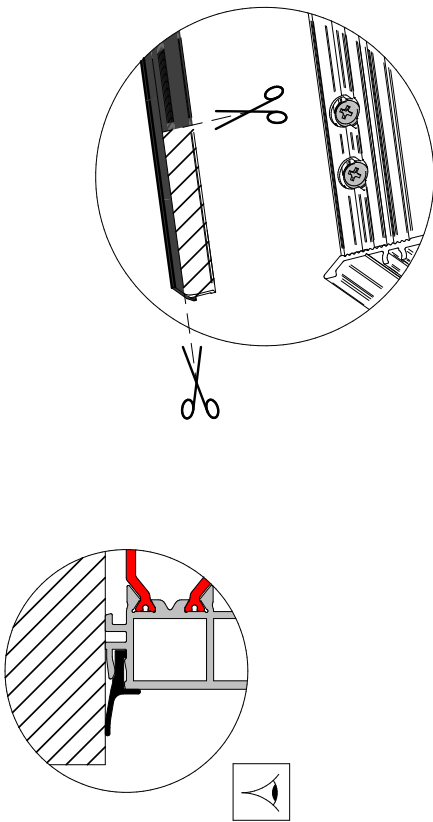

1


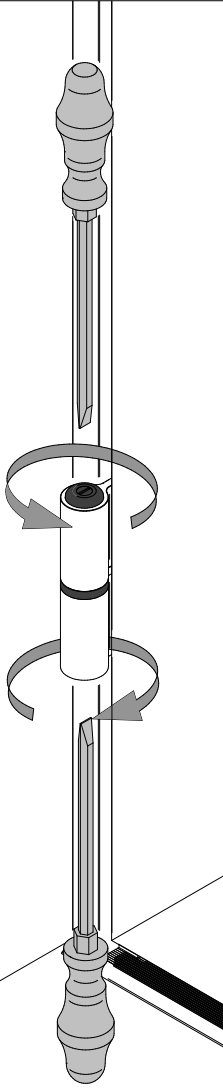


2

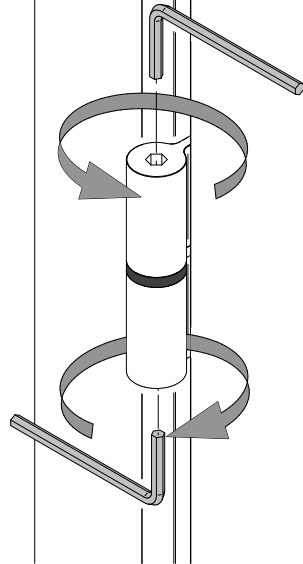


Anpassung der scharniere

3







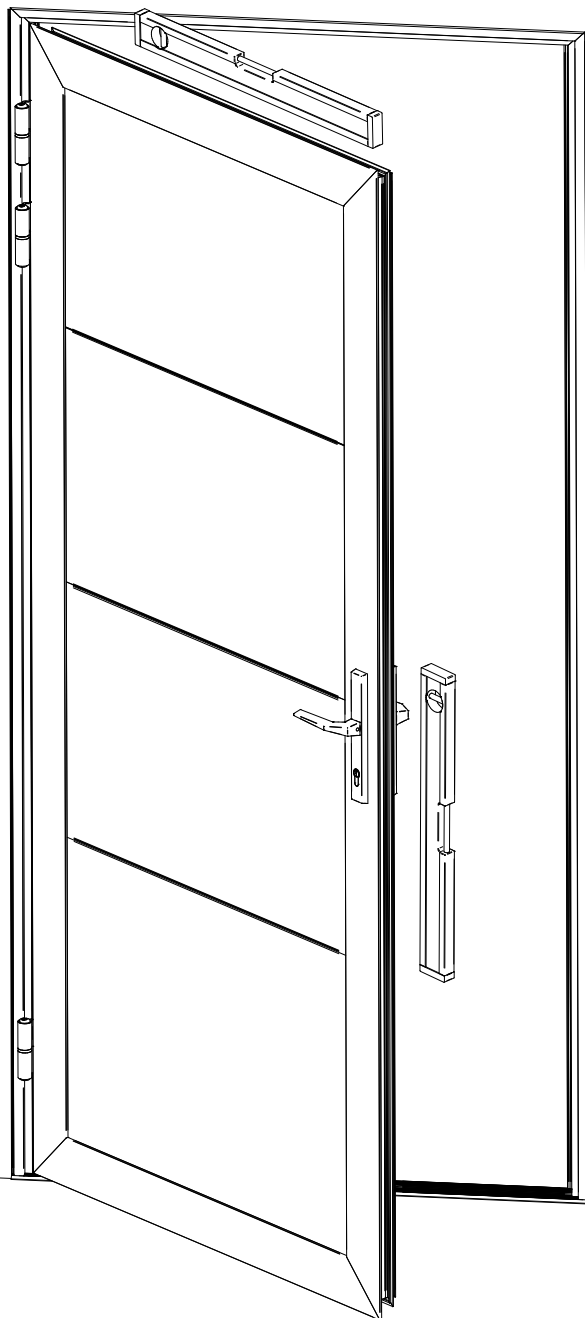


Aussen




Innen

100 art nr. 9388

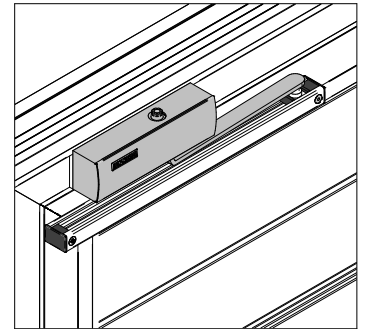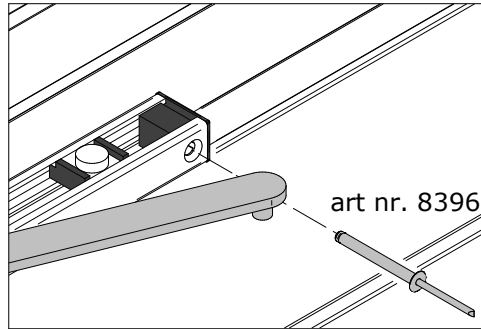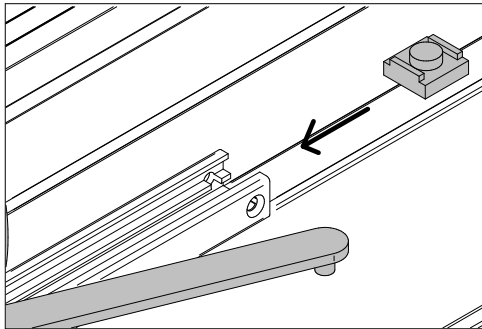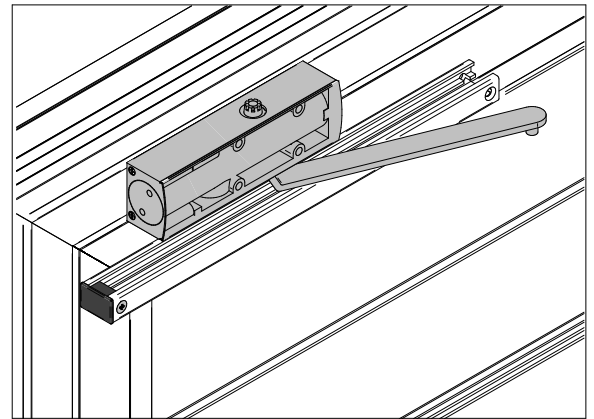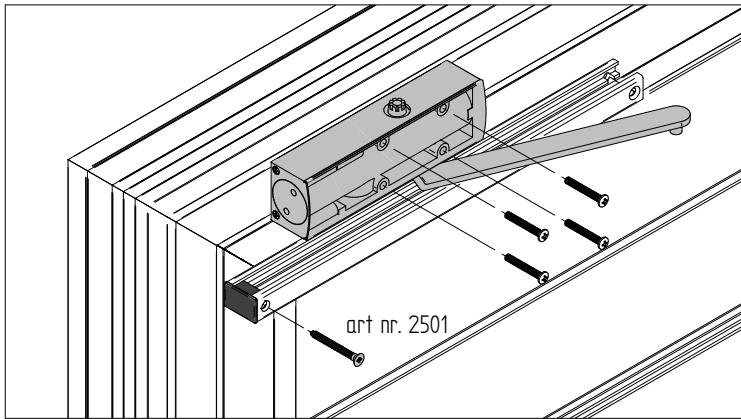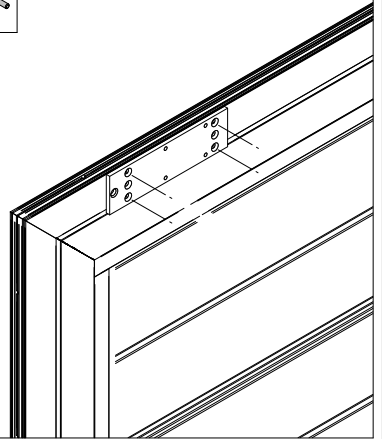


Aussen




Innen

97

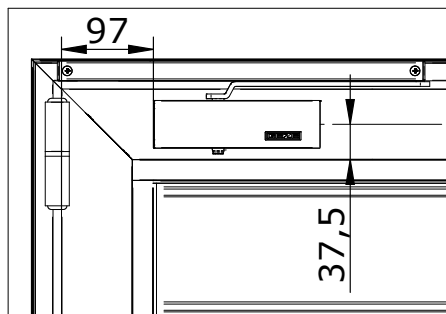


37,5

art. nr. 8396

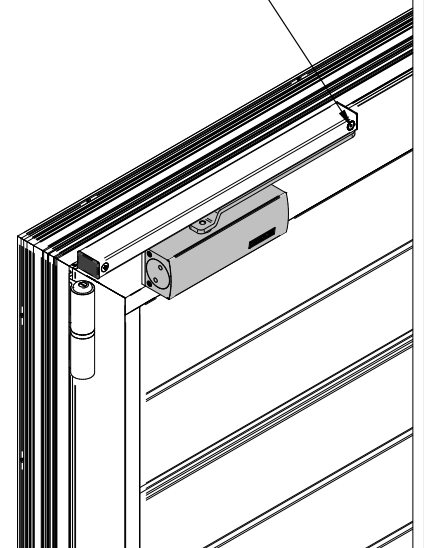

art.nr.: 2538

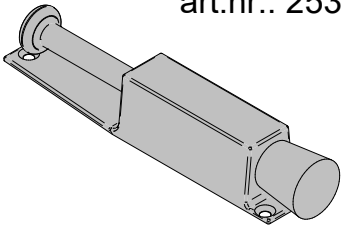

25

200

